

WARRANTY

This equipment is warranted to be free from defects in materials and workmanship under normal use and service for a period of ninety days from the date of purchase.

If service or repair is required within the warranty period, pack equipment only, without accessories or batteries, and your sales receipt to validate the date of purchase in a heavy duty corrugated box and mail to the address given below. Enclose a check or money order for \$1.00 to cover postage and handling.

If service or repair is required after the expiration of the warranty date, include a check or money order for \$3.00 to cover service, postage and handling.

This warranty shall not apply where damage to the equipment is due to any of the following causes:

- Repair or alteration of the equipment by unauthorized persons which in our opinion adversely affects the reliability or performance of the equipment.

Mail equipment to:

IN EASTERN U.S.A.
Realeast Service Corp.
34 Exchange Place
Jersey City, New Jersey 07302

IN WESTERN U.S.A.
Realwest Service Corp.
10823 E. Rush Street
El Monte, California 91733

PRINTED IN HONG KONG

- When equipment has been damaged through accident or negligence.
- Cracked or broken cabinets.
- Damage caused by leaking batteries.
- Damage caused by use of improper AC adapters.
- Damage caused by excessive heat.

BATTERIES ARE NOT COVERED UNDER THIS WARRANTY.

NOTE: It is important that **before** returning equipment for service or repair, that the equipment be checked using fresh batteries. The old batteries may simply be exhausted or defective.

This warranty is valid in the United States only and is limited to the terms and conditions contained herein. No other person is authorized to assume any other liability in connection with the sale of this equipment.

JADE

model J-102

10 Transistor

Radio

Your new transistor radio is a fine precision instrument that is engineered for maximum efficiency and trouble-free enjoyment. To obtain the best possible performance and the greatest pleasure from it, we recommend that you follow these simple instructions:



TO INSTALL BATTERY

Open the case of the radio by placing a coin in the slot on the bottom and twisting the coin gently, separating the cover from the radio case. The battery compartment in the case contains a card listing the batteries that are suitable for use with this radio. Use only those recommended. Snap the two battery terminals into the two clips provided in the

TO OPERATE RADIO

All radios have two basic operating controls, an ON-OFF-VOLUME switch and a TUNING control. Turn the radio on by turning the ON-OFF-VOLUME switch until a slight click is heard. Turning it further will increase the volume. Turn the TUNING control in either direction to select the station you want, as indicated on the dial, until station is heard with maximum volume and best reception. Adjust volume to desired level. Always tune your radio accu-

battery compartment. The smooth terminal of the battery fits into the larger flanged clip. The larger flanged terminal of the battery fits over the smaller smooth clip. Insert the battery in the compartment. Replace the radio cover, making sure that it is properly lined up with the case before gently pressing the radio closed.

rately for best reception and maximum battery life. Do not use the tuning control to adjust volume.

Radios are sensitive to direction and therefore clearer reception may be obtained by rotating the radio to different positions. To turn the radio off, turn the ON-OFF-VOLUME switch in the direction to reduce the volume until a slight click is heard. Be sure you hear the click. Until you do, the radio is not turned off even though you cannot hear it playing.

EARPHONE ATTACHMENT

Your radio includes an earphone jack to enable you to listen without disturbing others. Simply plug the earphone attachment into the jack in the radio. The speaker is automatically disconnected and broadcasts can be

heard only through the earphone attachment. Use only the earphone attachment provided with your radio. When the earphone jack is unplugged, the radio will again play through the speaker.

GENERAL REMINDERS

- Never leave your radio in high-temperature areas such as the window shelf or glove compartment of an automobile or on top of a radiator or stove at home. Excessive heat can damage it.
- When playing your radio inside a steel or concrete building, place it near a window for best reception.
- Replace used batteries with fresh ones when volume begins to fade or reception becomes distorted. Check batteries from

time to time for leakage or corrosion. If battery contacts become corroded or dirty, replace the battery immediately and clean the battery compartment thoroughly. If your radio is not to be used for a month or longer, remove the batteries to prevent possible corrosion.

- If you feel your radio needs service, check it with a fresh battery. The old battery may be exhausted or defective. The radio may not need servicing.